

Scissors
Scheren
Ножницы
Nůžky














SCISSORS 9978

Scissors / Scheren / Ножницы / Nůžky

H

									
9978001004BL	16,5 cm	1 pc	131397	144x70x10	0,04	12 pcs	134831	170x76x902	0,49
9978001002BL	20,5 cm	1 pc	131373	178x70x15	0,07	12 pcs	134978	227x95x125	0,86
9978001006BL	20,5 cm	1 pc	131410	178x70x15	0,09	12 pcs	134954	225x95x120	1,04
9978001003BL	25,5 cm	1 pc	131380	220x80x15	0,10	12 pcs	134756	262x100x120	1,28



9978001004BL



9978001002BL



9978001006BL




 







9978001003BL

SCISSORS, ROUNDED 9978

Scissors, rounded / Scheren mit Rundspitze / Ножницы с закругленными концами / Nůžky s kulatou špičkou

H

									
9978001008BL	13,5 cm	1 pc	133674	160x70x10	0,03	12 pcs	134992	168x75x75	0,38
9978001009BL	15 cm	1 pc	133681	144x70x10	0,03	12 pcs	134794	171x75x90	0,52



9978001008BL



9978001009BL

SCISSORS, FOR LEFT-HANDERS, ROUNDED 9978

Scissors for left-handers, rounded / Scheren für Linkshänder, mit Rundspitze

Ножницы с закругленными концами, для левшей / Nůžky pro leváky, s kulatou špičkou

**H**

9978001005BL	13,5 cm	1 pc	131403	144x70x10	0,02	12 pcs	134770	170x87x74	0,26



9978001005BL

FUN CUT 9978

Craft scissors / Dekorativscheren / Декоративные ножницы / Dekorační nůžky

H

9978001007BL	Zig zag	1 pc	131427	180x83x15	0,04	12	134817	185x87x183	0,54
9978001010BL	Small wave	1 pc	133698	180x83x15	0,04	12	134855	185x87x183	0,54
9978001011BL	Zipper	1 pc	133704	180x83x15	0,04	12	134916	185x87x183	0,54
9978001012BL	Half circle	1 pc	133711	180x83x15	0,04	12	134879	185x87x183	0,54
9978001013BL	Lightning	1 pc	133728	180x83x15	0,04	12	134893	185x87x183	0,54



9978001007BL



9978001010BL



9978001011BL



9978001012BL



9978001013BL